


## 360° Compression Tool - RG59 and RG6 Connectors

CTF-180
Manual/Instructions

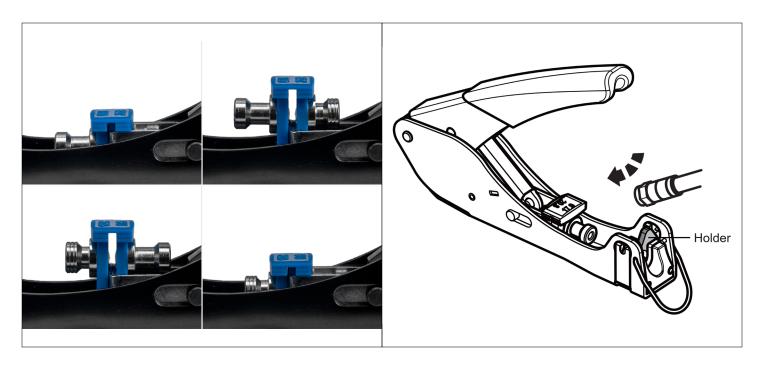

## **Instructions:**

- 1. Select the proper plunger length by removing the plunger, rotating plunger to the 17.9 or 20.8mm marking and reinstall the plunger
- 2. Prep the cable and insert F connector onto cable
- 3. With the connector pushed properly onto the cable, place the connector into the crimp holder, and squeeze the handles together

